



User Manual & Setup Guide

V1.0

Overview:
Specification:
Features:
/arranty Policy:4
PS:
JI Digital FPV System:
ind TBS NanoRX:
ind FrSky R-XSR:
nstall Betaflight:
Install Drivers:
RM(DJI Transmitter):
penTX Transmitter:
nstall Silicone Pad,Landing pad:12
nstall Propellers:
re-flight Check:14
nclude:15
ontact:15

Contents

Overview:

The latest 3-inch Quadcopter developed by GEPRC is officially released now, and two versions are currently available: CineLog30 VISTA Polar and CineLog30 Analog.

CineLog30 is developed on the basis of CingLog25. It has a stronger power output with 1404-3850kv motor and T3 x 3 x 3 propellers.Ultra light fuselage weight, and CineLog VISTA Nebula Nano equipped with Naked GoPro Hero 8 Camera and 4S660mAh battery take-off weight is only 249g.The duration of the flight is 7 minutes.The INSTA 360 GO2 camera also can be installed by the mounting base.

We pursue lighter weight, better flying feel and more extended functions of the Quadcopter.

Specification:

Model: Cinelog30 Quadcopter FC: GEP-F411-35A AIO ESC: BLheli_S 35A VTX: VISTA Camera: Caddx Polar Antenna: CADDX Polar Antenna Motor: GR1404 3850KV Propeller: T3x3x3 Frame: GEP-CL30 Motor to Motor: 126mm Cinelog30 HD Weight: 158.5g Receiver: PNP, Frsky RXSR , TBS Nano RX

Features:

1. Small size, light weight, with 4s660mah battery, take-off weight is only 222.5g.

2. Equipped with HD VISTA digital FPV system.

3. The GoPro Hero 8 naked camera and INSTA 360 GO2 camera can be installed, with the mounting base.

- 4. Great video shooting effect.
- 5. 1404-3850KV motor with T3x3x3 propellers, strong power output.

Warranty Policy:

1. If Quadcopter is damaged or unknow issue,please contact GEPRC and send it back . We'll do our best to get this taken care of quickly for you.

2. Any impact damage, product liquid damage, high temperature burn or other artificial damage is not covered by warranty.


PS:

1. All components has been strictly inspected and tested before shipping.

2. If you have any problems, please cooperate with our engineers to figure out solutions. (E-mail: support@geprc.com.)

DJI Digital FPV System:


1. Turn the power of the FPV Goggles, DJI FPV Transmitter, and Quadcopter. Press the FPV Goggles bind button twice, and it will beep to indicate the binding state.

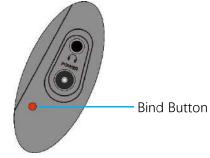


2. Press the VISTA bind button, the indicator light turn red , indicating that it is binding. Then the indicator light turns yellow, means the binding is successful, and the FPV Goggles will display the received picture.



3. Press the **C1 custom button**, **record button** and **right scroll wheel button** of the remote controller, at the same time. The indicator light turns blue, and the remote controller sends a beep indicating that it is binding.

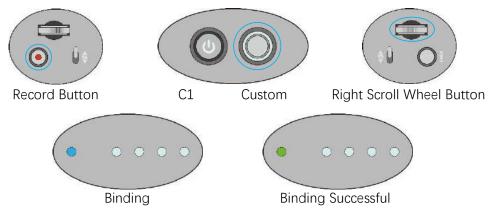


4. Press the VISTA bind button, the indicator light turn red , indicating that it is binding. Then the indicator light turns yellow, means the binding is successful. And the remote controller inducator light turns Green.

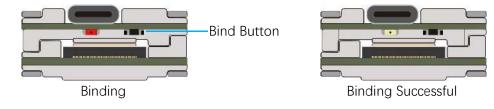

Bind TBS NanoRX:

- 1. For Taranis X9D/X9D Plus/X9E and Taranis QX7, turn on the transmitter, go to the TOOLS CROSSFIRE SETUP XF Micro TX ,and select Bind.
- 2. Turn on the receiver while holding the bind button on the receiver, release the button and the green LED on flash .and then holding the button for 8 second ,and release. And the green light is off and the red light is flashing, 'update micro RX?' will appear on the transmitter screen, and select 'ENTER'.
- 3. Wait for the update to complete, the binding is successful, and the receiver green light is on.

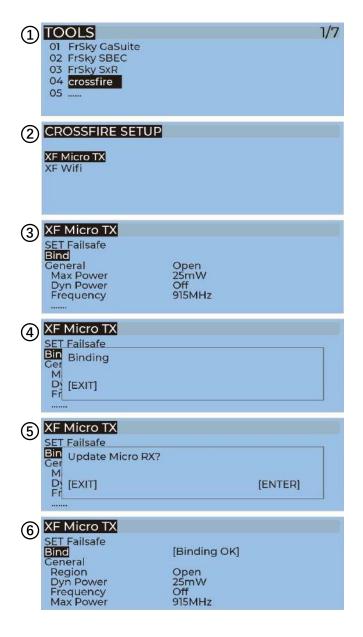



Bind Button



Binding




Binding Successful


Bind FrSky R-XSR:

1. For Taranis X9D/X9D Plus/X9E and Taranis QX7, turn on the transmitter, go to the MENU – MODEL SETUP – PAGE 2, choose Internal RF, and select BIND.


2. Turn on the receiver while holding the bind button on the receiver, release the button and the **bule,red,yellow LED** on .

3. When the red light flashes, it indicates that the binding is successful.Turn off the receiver, and then turn on the receiver.The blue light and yellow light of receiver are on, indicating that the link is normal.

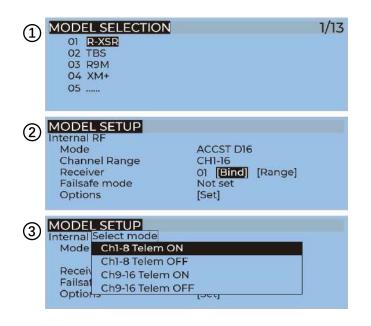

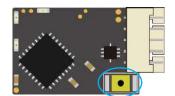

Binding Button

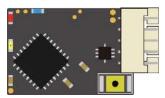

Binding



Binding

Install Betaflight:

Although your Quadcopter comes from the factory nearly completely ready to fly, you still need to install betaflight to facilitate your subsequent use of betaflight for debugging. Installation package download address:

https://github.com/betaflight/betaflight-configurator/releases

Enter the web page, pull to the bottom, and select the appropriate installation package to download. EXE suffix is Windows system, DMG suffix is MacOS system, RPM / DEB suffix is Linux system, APK suffix is Android system.

Install Drivers:

If you are on windows, you must install the driver manually. MacOS and Linux do not.

CP210x Drivers:

https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-dri

vers

STM USB VCP Drivers:

http://www.st.com/en/development-tools/stsw-stm32102.html

Zadig:

http://zadig.akeo.ie/

ARM(DJI Transmitter):

With DJI FPV Transmitter, the toggle switch is set at the factory. The corresponding functions of each switch are as follows:

SA→AUX1 (ARM)

SB→AUX2 (MODES)

SC→AUX3 (BEEPER)

SD→AUX4 (Vacancy)

-

ARM	AUX1 • Min: 900 Max: 1250	 900	4	 1000	ï	×.	E to	1 1 200		ñ	 1400	ř.	1500	 1600	ä	1800	9	1	00	2100	¢
Add Range																					
ANGLE	AUX2 •																				¢
Add Link	Min: 1300	1	1	. L.	8	ii.	×	É., (. L.	1		1	2	1	14	3.1	- 11	1	
Add Range	Max: 1650	900		1006			13	200			1400	3	500	1600		1800		200	0.0	2100	
HORIZON	AUX2 •														171	1				11	C
Add Link	Min: 1750	ĩ		1	×.	30	8,1	£ 1	0	11	13	10		516	-	-		× 4			
Add Range	Max: 2100	900		1000			13	200			1400	3	500	1500		1000		200	00	2100	
BEEPER	AUX3 •															1				H	0
Add Link	Min: 1750	1		ï	1	÷.	ŝ.	Î.	i ti	15	Ĕ	F		1	-Curr	1 0	1	9.1	1		
Add Range	Max: 2100	900		1000			12	200			1400	1	500	1600		1800		200	0.0	2100	

DJI toggle switches are all three sections. If you move the Yellow cursor of the corresponding aux channel of the switch, the corresponding function will be turned on when you move to the set range.

Û	ARM Add Range	AUX1 • Min: 900 Max: 1250	11 1 1 1 1 1	• 1000	•	1	0		1 1400	1 1000	1600	· 1800		1	1 '	 2500	0
	ARM Add Range	AUX1 ¥ Min: 900 Max: 1250	900	+ 1000	6.9	120			1400	0 1500	1 1606	* 1800	1	-	1 *	 2100	Q
	ARM Add Range	AUX1 × Min: 900 Max: 1250	1	* † 1005	8 (8	120	U V V	<u>a</u> (1] ' 1400	1 1566	1600	* 1800	2.4		1000	1 2100	0

OpenTX Transmitter:

The transmitter of openTX system needs to check the AUX channel. For Taranis X9D/X9D Plus/X9E and Taranis Q X7, turn on the transmitter, go to the MENU –MIXS and view the current AUX channel settings.

MIXE	S	5/13
CH1	100 I Ail	
CH2	100 I Ele	
CH3	100 I Thr	
CH4	100 I Rud	
CH5	100 I SF	
CH6	100 🛛 SG	
CH7	100 🛛 SA	

CH1-CH4 corresponds to four channels of rocker

CH5 (SF) →AUX1 (ARM)

- CH6 (SG) →AUX2 (MODES)
- CH7 (SA) →AUX3 (BEEPER)
- CH8 (Vacancy) →AUX4 (Vacancy)

FrSky X9D transmitter SF toggle switch are two sections. If you move the Yellow cursor of the corresponding aux channel of the switch, the corresponding function will be turned on when you move to the set range.

L	ANM	AUX1 • Min: 900 Max: 1250	H I I I Society one	1 1 1 1200	* *] *] 1400 1500	1 1 1 1 1 1 1800 1800) 2000 2100	0
Ŷ		AUX1 * Min: 900 Max: 1250	11 1 1 900 1000	1200	* 1 1 1400 1505	* * * * 1666 1800	I I 2000 2100	0


Use the transmitter wheel to move the cursor to select the AUX channel, and then press and hold the wheel key to edit the channel.

MIXES		5/13
CHI	Ealt	
	Insert Before	
CH2	Insert After	
CH3		
CH4	10 Copy	
CH5	T Move	
CH6	10 Delete	
CH7	100 🛛 SA	

You can name the aux channel, or set the toggle switches you want, and exit and save it.


MIXES CH5	
Mix name	
Source	SF
Weight	-100 100 -100
Offset	0
Trim	
Curve	Diff 0
Modes	012345678

Install Silicone Pad, Landing pad:

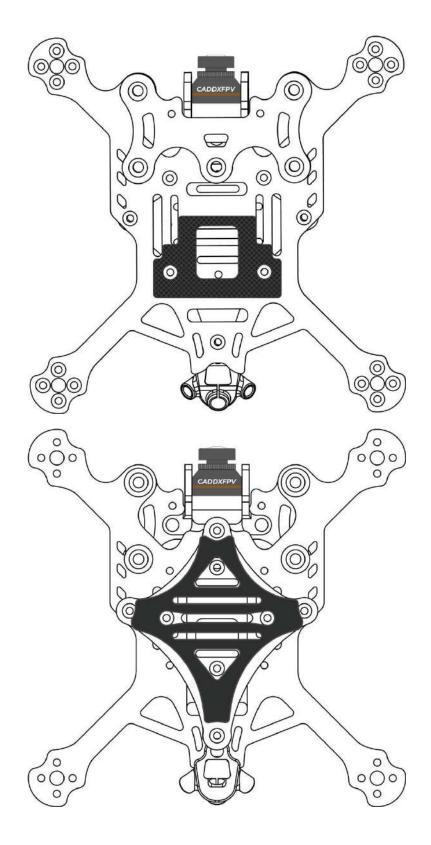

Install Propellers:

Although the propeller of cinelog30 are installed in the factory, the direction of the propeller should be checked before taking off.

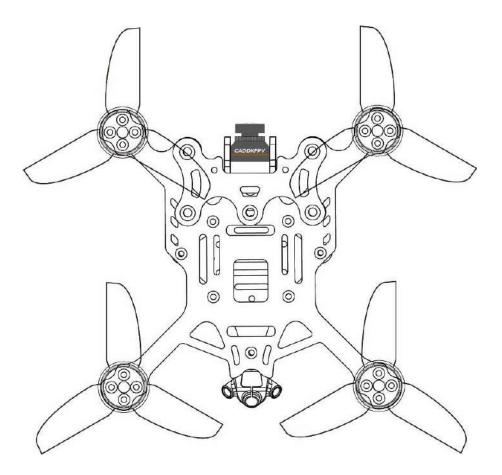

Pre-flight Check:

In many cases, the cause of a Quadcopter crash is not checked before takeoff. For the sake of safety, we suggest that you check before every flight. The steps are as follows:

- 1. Turn on the transmitter and select the correct mode. Please confirm that the arming switch on the transmitter is in the "disarmed" position and throttle is all the way down;
- 2. Please perform a physical inspection of the Quadcopter for damage. If there is damage, please repair first;
- 3. Please comfirm the propeller is in the right direction and the propeller nut is locked, otherwise there is a risk of crash;
- 4. Check LiPo battery voltage. A fully-charged LiPo should be about 4.2 volts per cell, or about 12.6 volts for a 3S, or 16.8 volts for a 4S;
- 5. Please comfirm the battery is securely attached to the aircraft by the strap. And secure the balance lead so that it can't be struck by the props;
- 6. Please Scan the flight area for any safety issues that might be present, such as people or animals;
- 7. Verify that you have clean, strong video in your FPV goggles or screen. If you see interference or you see another pilot's feed, resolve this issue before flying;
- 8. Arm the quadcopter. Listen for the props hitting anything like an antenna or the battery wire;
- 9. At this stage, take off and enjoy flying.

Note: if you choose to fly close to water, please pay attention to the flight safety. It is difficult to salvage the Quadcopter when it falls into the water, and the water in the Quadcopter is not covered by the warranty.

Include:

- 1 x CineLog30 HD VISTA Polar Quadcopter
- 1 x Battery strap 20x200mm
- 2 x T3x3x3 propellers (pairs)
- 2 x Propeller guards
- 2 x EVA damping rings of guards
- 2 x EVA landing pads
- 2 x Battery Silicone Pads
- 1 x Antenna fixed tube
- 1 x Screw package
- 1 x TBS receiver mount (PNP)
- 1 x TBS receiver antenna mount (PNP)

Contact:

Website: https://geprc.com/



instagram.com/geprc

Instagram





YouTube

geprc.com/support